

Using the DVD/VHS Player

1. **Locate the projector remote in the remote tray and power on the projector**
***make sure the projector is set to "Video"**



2. **Locate DVD/VHS Remote in the remote tray and power on the DVD/VHS Player.**



3. **Press source Button on DVD/VHS Remote to choose between DVD and VHS.**